


Quick Start Guide

HD Network Camera

IP Camera


1 Camera Connection Diagram

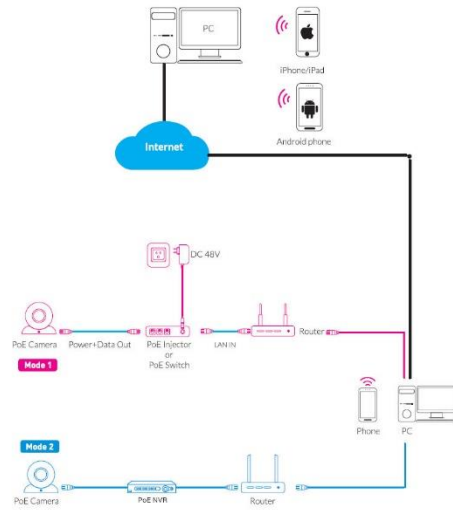


Attention: There are two connection modes:
1. For non-PoE NVR or Router, please connect the camera by a PoE switch or a PoE injector.
2. For a PoE NVR, please connect the camera directly to the PoE NVR, then follow the below steps.

2 Installation

Bullet Camera Installation Ceiling Mounting

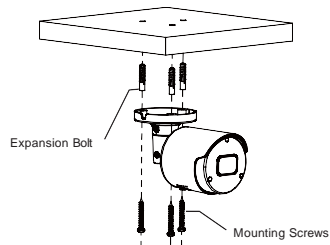


Insert three expansion bolts in place into the ceiling and fix the equipment with three mounting screws.

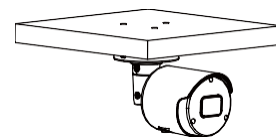


Completion of Installation

Dome Camera Installation


Ceiling Mounting

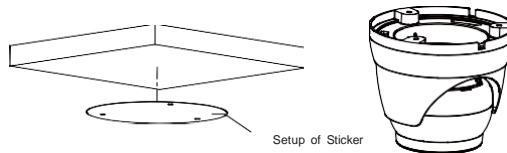


Paste the sticker in place at the proper position as selected.

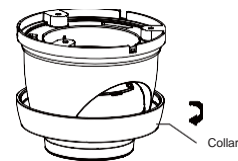


Remove the collar off the camera by rotating it down

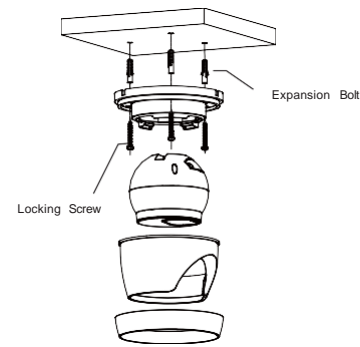


Fix the pedestal by drilling locking holes around the sticker and inserting three expansion bolts into the holes and fastening it with three locking screws.

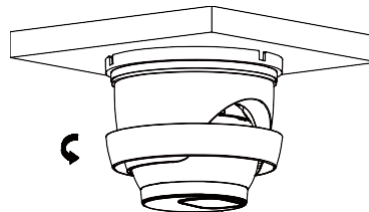

Mount the collar back by rotating it up

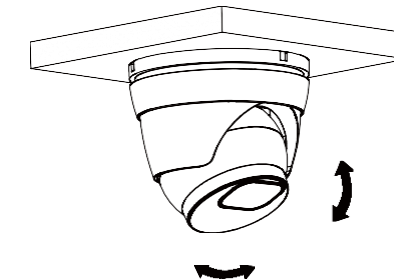


Adjust it to an appropriate angle.

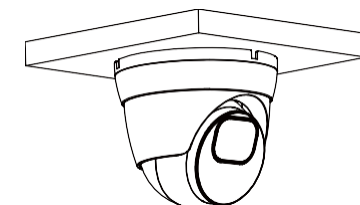


Completion of Installation

Vandal-Proof Dome Camera Installation

Ceiling Mounting

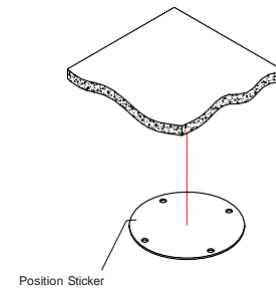


Apply the position sticker to the desired camera mounting position.

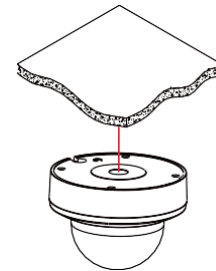


Cover Component

Remove the cover component by loosening the three locking screws with the included hex wrench.

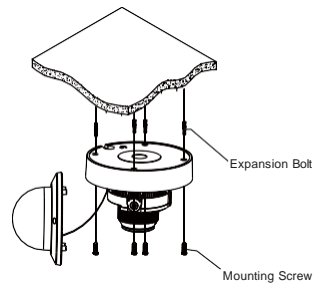

Use the position indicated on the position sticker to drill the holes needed to mount the camera base. Insert the expansion bolt into the holes. Match the base's mount openings to the expansion bolts position, then place the mounting screws through the base's mount opening into the expansion bolt. Tighten the mounting screws to ensure the camera base mounted securely.

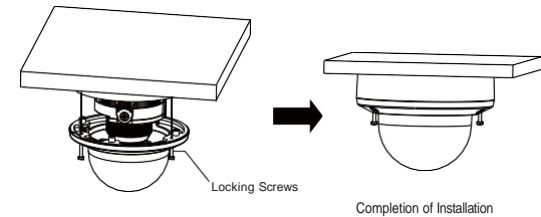

- * Place the cover component back onto the base.
- * Please make sure the locking screw position on the cover component matches the locking post on the base.
- * Tighten the locking screws after the cover component is in the correct position.



3 Install the APP

Scan the QR code below to download the mobile App.




4 Camera Settings

Open the app, you will see the following interface to add the cameras.

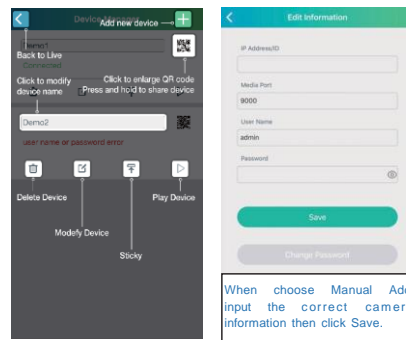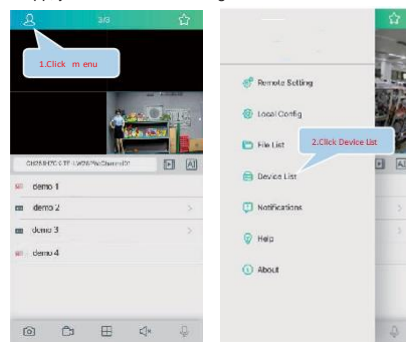


When choose Manual Add input the correct camera information then click Save.

If add the device successfully, you will see the following interface.

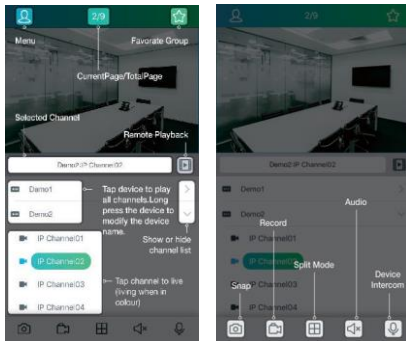

* Please refer to "Help" section for more detailed instruction.

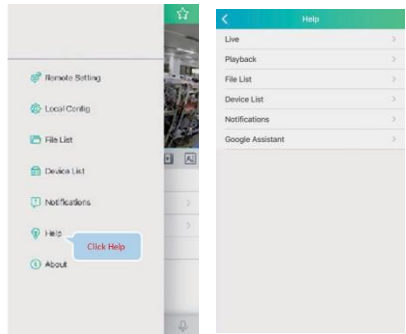


5 In Windows

1. Download the "Device Config Tool", it will help to search all the available devices on your local network.


Windows: <https://www.dropbox.com/s/4jv0mrx4hjo4qfw/Tool-Win.zip?dl=0>

Mac: <https://www.dropbox.com/s/evid0e4hez0bmfj/Tool-Mac.dmg.zip?dl=0>


2. Under "Device Config Tool", you can modify the information of a selected device. Including IP, Media Port, Web Port, Gateway, Net Mask, Net Mode. (The default username & password is: admin & admin)

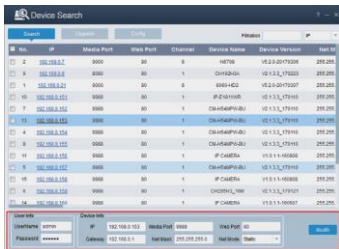

3. Open Internet Explorer and input the device's IP address; Input the username & password in the following interface to login the device.

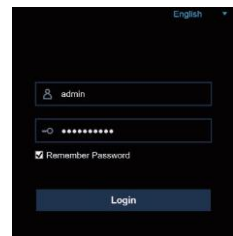


4. After login, click "Remote Setting" to change the setting.

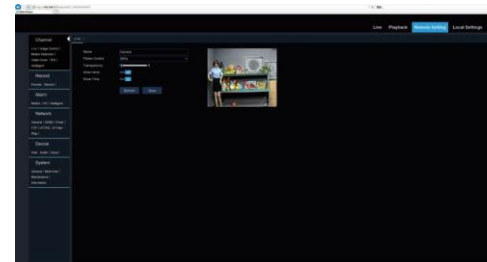

6 In MAC OS

1. Open your router web interface and login.
2. Find the "Attached device" or "Connected device" menu. Find the device's IP address according to its MAC address. The MAC address is labeled on the device.

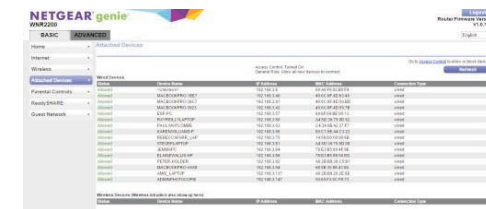

Picture for reference only

3. Input the device's IP address in Safari, login with your username & password. The default username/password is admin/admin.
4. After "Login", click "Remote Setting" to modify the settings.