

Tiandy

HOW-TO-GUIDE

HOW TO: Add an IP Camera using Onvif or RTSP to a Tiandy NVR

In this guide we will be providing you a walkthrough on how to add an IP camera using Onvif protocol or via RTSP stream to any Tiandy NVR.

Adding IPC using the Onvif Protocol



On the NVR navigate to the lower left corner and click the "Home" icon

This should bring you directly to the Cameras section. If it does not, select such tab option via the top bar. Within this page you will be presented with 2 lists:

- The top list which displays any recognized cameras found within your local network. (If the top list is not populated you can click the search button located between the 2 lists to search for any available cams.)
- 2) The bottom list displays your added cameras. (If a NVR has built in PoE you will see the PoE channels pre-added and unable to be deleted. However they can be modified if you are not using the built in poe ports for your IP Cameras.

idhdy			⚠₀	ili		Þ			_	×	_
	Playback	Backup EW	/ Mana	VCA	Cam	eras	Storage S	Alarm Set	System S.	System M	
hannels											
tream Setting		tion Config I	IPC Central Mana	gement	POE pow	er Inform	ation				
hree Smarts Setti	IP Addre	ss	Modify I	> A	ctivated	Added	Protocol	Chanr	nel	MAC Address	
	172.16.1	5.28					ONVIF				^
deo Setting	172.16.1	5.40					ONVIF				
SD	172.16.1	5.58					ONVIF				
	172.16.1	5.61					ONVIF				
otion	172.16.1	5.78					ONVIF				
ask Alarm	172.16.1	5.95					ONVIF				
	172.16.1	5.96					ONVIF				
arm Input	172.16.1	5.108					Private			3C:DA:6D:92:5B:68	
deo Loss	Carach.	1	0.014) —		Diantau	TD		
7 Setting	Search	Add			stomized A	Enal	ble S+ (first acces	s is Display	IP	V4 V All	<u> </u>
2 Setting	Added Device	25									
	Channel	Name	Connect S	Edit	Delete	Enable	Attribute		Protocol		
	01	Channel 1	Δ.				172.16.16.96 : 0	1	ONVIF		_
	02	IPX6-V2 Lobby Fron					172.16.16.58 : 0	1	ONVIF		
	03						rtsp://172.16.16	.28:554/media/	RTSP		
	04	Channel 4				0	0.0.0.0 : 01		Private		
	05	Channel 5				0	0.0.0.0 : 01		Private		
	06	Channel 6				0	0.0.0.0 : 01		Private		
	07	Channel 7				0	0.0.0.0 : 01		Private		~
	21										

Adding Cams:

1

How to Quick Add:

(Note this option only works if the cameras password has not been changed. Typically it is always recommended to manually add non Tiandy IP Camera.)

- Locate the IP address(es) of the camera(s) you would like to add via the top list of found devices and put a check mark within the box next to it
- 2. Select the option "Add".

Stream Setting		Config IPC Central Management		ment	POE pov	ver Information		
Three Smarts Setti	P Address		Modify IP	Activ	vated	Added	Protocol	Channe
	172.16.16.28		1				ONVIF	1
Video Setting	172.16.16.40		1				ONVIF	1
OSD	172.16.16.58		1	~			ONVIF	1
	172.16.16.61		X				ONVIF	1
Motion	172.16.16.78	_	1				ONVIF	1
Mask Alarm	172.16.16.95	4	1	~			ONVIF	1
Alexandra A	172.16.16.96		1				ONVIF	1
Alarm Input	172.16.16.108		1				Private	1
Video Loss			110					
PTZ Setting	Search Added Devices	Add	Quick Add	Custor	mized A	Enable S+	(first access is .	Display

If the camera has added correctly you will see a blue play icon within the "Added Device list. If not connecting properly you will see a yellow triangle icon in which it would be recommended to manually add your Onvif IP Camera.

ded Device	s						
Channel	Name	Connect S	Edit	Delete	Enable	Attribute	Protocol
01	Channel 1	Δ	1	×	×	172.16.16.96 : 01	ONVIF
02	IPX6-V2 Lobby Fron		1	×	~	172.16.16.58 : 01	ONVIF
03		Ô	1	×	~	rtsp://172.16.16.28:554/media/	RTSP

How to Manually Add Using Onvif:

 Within the "Cameras" page select the option labeled "Customized Add".

〕 Playback	💾 Backup E ^v	∕∆ ₀ W Mana	iii VCA	Cam]a eras	📺 Storage S	置 Alarm Set	System S
	tion Config	IPC Central Man	agement	POE pow	er Inform	ation		
IP Addres 172.16.16 172.16.16 172.16.16 172.16.16 172.16.16 172.16.16 172.16.16 172.16.16	s .28 .40 .58 .61 .78 .95 .96	Modify I	P Act	ivated	Added	Protocol ONVIF ONVIF ONVIF ONVIF ONVIF ONVIF	Chan 1 1 1 1 1 1 1 1	nel N
Added Devices	108 Add	Quick Add	Cust	omized A	🗌 🗔 Enat	Private	1 s is Display	30 IPv4
Channel 01 02	Name Channel 1 IPX6-V2 Lobby Fror	Connect S A	Edit	Delete × ×	Enable ✓	Attribute 172.16.16.96 : 01 172.16.16.58 : 01		Protocol ONVIF ONVIF

 Within the Customized Adding page fill in the cameras corresponding information including the "Device Address", "Port No", "User" and "Password". Once all fields are filled in select the option labeled "Add".

Customized Adding		×	
Channel No.	[04]Channel 4	~	
Protocol	ONVIF	~	
Connect mode	IPv4	⊻ /	Device Address – Here you will fill in your IP Cameras
Network type	тср	~	IP Address.
Device Address	172.16.16.188		
Port No.	80		Port No – Here you will fill in your IP Cameras port
Proxy IP			
Device Channel	01	×	User – Here you will fill in your IP Cameras username
User	admin		
Password	****		Password – Here you will fill in your IP Cameras
Decryption			password
🥡 For the non-activated IPC, the NVR pas	s		
Sync password to get res			
Batch Addi	ng Continue to add Add	Cancel	

If the camera has added correctly you will see a blue play icon within the "Added Device list. If not connecting properly you will see a yellow triangle icon in which it would be recommended to manually add your Onvif IP Camera.

dded Devices	5						
Channel	Name	Connect S	Edit	Delete	Enable	Attribute	Protocol
01	Channel 1	Δ	1	×	V	172.16.16.96 : 01	ONVIF
02	IPX6-V2 Lobby Fron		1	×	~	172.16.16.58 : 01	ONVIF
03			1	×	~	rtsp://172.16.16.28:554/media/	RTSP

How to Manually Add Using Onvif:

1. Within the "Cameras" page select the option labeled "Customized Add".

D Playback	B ackup	∆₀ EW Mana	نیا VCA	Can	⊡¤ neras	🗂 Storage S	ដ្រី Alarm Set	System S
Basic Configurat	ion Config	IPC Central M	anagement	POE pov	ver Inform	ation		
IP Addres	s	Modil	y IP Ad	tivated	Added	Protocol	Chann	el N
172.16.16.	28	1	\checkmark			ONVIF	1	
172.16.16.	40	1	\checkmark			ONVIF	1	
172.16.16.	58	1	~		¥.	ONVIF	1	
172.16.16.	61	1	~			ONVIF	1	
172.16.16.	78	1	~			ONVIF	1	
172.16.16.	95	1	~			ONVIF	1	
172.16.16.	96	1	~		~	ONVIF	1	
172.16.16.	108	1	~	i 🌵 👘		Private	1	30
Search	Add	Quick A	dd Cus	tomized A	. 🗌 Ena	ble S+ (first access	is Display	IPv4
Added Devices	5							
Channel	Name	Connect S	Edit	Delete	Enable	Attribute		Protocol
01	Channel 1	Δ	1	×	×	172.16.16.96 : 01		ONVIF
02	IPX6-V2 Lobby Fro	n 📀	1	×	×	172.16.16.58 : 01		ONVIF

2. Change the **"Connect mode"** to the option **"RTSP"**.

F	Customized Adding		×
	Channel No.	[02]]DC amora	
Â	Channel No.		`
2. 2.	Protocol	Private Protocol	^
2.	Connect mode	Private Protocol	^
2. 2.	Device Address	RTSP	~
2. 2.	Port No.	3000	
2.	Proxy IP		
a	Device Channel	01	~
ai	User	admin	
	Password	****	
	Decryption		
	<i>i</i> For the non-activated IPC, the NVR	pass	
	Sync password to get res		

3. Fill in the corresponding RTSP fields.

Channel No. - Here you would select the channel you'd like to add the camera to. **Protocol** – No change needed

Network Type – No change needed

Main stream & Sub Stream URL –Here you will input your IP Cameras corresponding RTSP string. Example RTSP string below.

Examp	le Flux & UN	IV RTSP information:	
	Flux	rtsp:// <ip_address>:554/stream<0 or 1></ip_address>	
	UniView	rtsp:// <ip_address>:554/media/video<1</ip_address>	
		or 2>	
<ip_ad< td=""><td>dress>=the i</td><td>p address of the camera you are trying to a</td><td>dd</td></ip_ad<>	dress>=the i	p address of the camera you are trying to a	dd
<# or #	>=the stream	n number, With Flux the main stream is at () and the sub
at 1 an	d with UNV	the Main is at 1 and the sub is at 2	

User – Here you will enter the User name for the camera **Password** – Here you will enter the Password for the camera Once all fields are filled in correctly select the option **"Add"**.

Channel No.	[04]Channel 4 V	
Protocol	RTSP	
Network type	ТСР 🗸	
Main stream URL	rtsp://	
Sub-stream URL	rtsp://	
User	admin	
Password	****	
⑦ For the non-activated ☑ Sync password to get	d IPC, the NVR pass t res	

If the camera has added correctly you will see a blue play icon within the "Added Device list. If not connecting properly you will see a yellow triangle icon in which it would be recommended to manually add your Onvif IP Camera.

Added Device	s						
Channel	Name	Connect S	Edit	Delete	Enable	Attribute	Protocol
01	Channel 1	Δ	1	×	×	172.16.16.96 : 01	ONVIF
02	IPX6-V2 Lobby Fron		1	×	~	172.16.16.58 : 01	ONVIF
03			1	×	~	rtsp://172.16.16.28:554/media/	RTSP

Adding IPC using the Onvif Protocol via Web Client

Adding IPC Using Onvif:

- Open a web browser and navigate to the ip address of the NVR.
 This info can be found in System Setting tab under Network Settings
- 2. From there, login using the username and password of your Tiandy NVR.



Once Logged in you will be presented with the Live View page

- 1. At the top select Configuration
- 2. Then select Digital Channel (located on the left)

Tiandy Live	View	Playb	ack L	.og	Configurati	on	EW				
Basic Set	Digital	Channel	POE Power Information	on							
Digital Channel		IP /	Address	Protocol Type	Chn No.	Add status	Activation st	MAG	c	Edit	Add
Audio Video Set											
Network											
Event Schedule											
VCA											
Advanced Intelligence											
Storage											
Dome Set											
System											
	Searc	h A	dd Customize	. Quick Add	Advance	Set	Display a	nd Screen	IPv4	~ A	11
	🗆 Cha.	Camera	Connection Status		Attribute		Protocol Type	State	Modify	Cloud Up	. Restart I
	□ 1	Channel 1	Off Line(Usernam	1	72.16.16.96:1		Onvif	Enabled	Modify		
	2	IPX6-V2	On Line	1	72.16.16.58:1		Onvif	Enabled	Modify		Restart
	□ 3		Off Line		0.0.0.0:1		Private	Forbidden	Modify		
	□ 4	Channel 4	Off Line		0.0.0.0:1		Private	Forbidden	Modify		
		Channel 5	Off Line		0.0.0.0:1		Private	Forbidden	Modify		
		Channel 6	Off Line		0.0.0.0:1		Private	Forbidden	Modify		
	0 7	Channel 7	Off Line		0.0.0.0:1		Private	Forbidden	Modify		
	8	Channel 8	Off Line		0 0 0 0 1		Private	Forhidden	Modify		

Two list will be displayed the top list shows available cameras and the bottom shows Channels. If the top list is empty click the "Search" button to populate the cameras list.

Basic Set	Di	igital C	hannel	POE Po	wer Informatio	n								
Digital Channel		_												
Digital Channel			IP A	IP Address Pr		Protocol Type	Chn No.	Add status	Activation st	MA	с	Edit	Add	
Audio Video Set			172.1	6.16.11	0	Private	1		Activated	3C:DA:6D:	BF:E3:F7	Edit	Add	^
Network			172.1	6.16.10	8	Private	1		Activated	3C:DA:6D:92:5B:68		Edit	Add	
Event Schedule			172.1	6.16.11	1	Private	1		Activated	3C:DA:6D:	86:F0:C9	Edit	Add	
VCA			172.1	6.16.10	9	Private	1		Activated	3C:DA:6D:	4E:21:0B	Edit	Add	
Advanced Intelligence			172.1	172.16.16.96 172.16.16.95		Onvif	1	Added	Activated			Edit	Add	
Storage			172.1	2.16.16.95		Onvif	1		Activated			Edit	Add	
Dome Set			172.1	16.16.40)	Onvif	1		Activated			Edit	Add	
System			172 1	IE 16 11	5	Onvif	1		Activated			Edit	bb∆	~
		Stop	A	dd	Customize	Quick Add	Advance	Set	Display a	nd Screen	IPv4	~	All	\sim
		Cha	Camera	Add Customize			Attribute		Protocol Type	e State	Modify	Cloud Up.	Restart IPC	c
		1	Channel 1	Off Line	Usernam	1	72.16.16.96:1		Onvif	Enabled	Modify			^
		2	IPX6-V2	C	n Line	1	72.16.16.58:1		Onvif	Enabled	Modify		Restart IPC	2
		3		C	off Line		0.0.0.0:1		Private	Forbidder	Modify			
		4	Channel 4	C	off Line		0.0.0.0:1		Private	Forbidder	Modify			
		5	Channel 5	C	off Line		0.0.0.0:1		Private	Forbidder	Modify			
		6	Channel 6	C	off Line		0.0.0.0:1		Private	Forbidder	Modify			
		7	Channel 7	C	off Line		0.0.0.0:1		Private	Forbidder	Modify			
		8	Channel 8	C)ff Line		0.0.0.0.1		Private	Forbidder	Modify			V

Quick Add:

(Note this option only works if the cameras password has not been changed. Typically it is always recommended to manually add non Tiandy IP Camera.)

- Locate the IP address(es) of the camera(s) you would like to add via the top list of found devices and put a check mark within the box next to it
- 2. Select the option "Add". (Note if the camera does not connect refer to the Manually add instructions)

Tiandy Live	/iew	Playba	ack l	.og	Configuration						
Basic Set	Digita	al Channel	POE Power Informatio	on							
Digital Channel											
Digital Channel		IP A	ddress	Protocol Type	Chn No.	Add status	Activation st	MAC	;	Edit	Add
Audi		172.7	16.16.28	Onvif	1		Activated			Edit	Add
Netw		172.1	16.16.40	Onvif	1		Activated			Edit	Add
Event Schedule		172.1	16.16.58	Onvif	1	Added	Activated			Edit	Add
VCA		172.1	16.16.61	Onvif	1	Added	Activated			Edit	Add
Advanced Intelligence		172.1	16.16.95	Onvif	1		Activated			Edit	Add
Storage		172.1	16.16.96	Onvif	1	Added	Activated			Edit	Add
Dome Set		172.1	6.16.108	Private	1		Activated 3C:DA:6D:92:5B:68		2:5B:68	Edit	Add
System	Π.	172 16 16 115		Onvif	1		Activated			Edit	bbΔ
	Sea	arch A	dd Customize.	. Quick Add	d Advance	Set	Display a	nd Screen	IPv4	✓ A	ı -
	🗆 CÞ	Camera	Connection Status		Attribute		Protocol Type	e State	Modify	Cloud Up	. Restart IPC
2		1 Channel 1	Off Line(Usernam	1	172.16.16.96:	I	Onvif	Enabled	Modify		
_		2 IPX6-V2	On Line	1	172.16.16.58:		Onvif	Enabled	Modify		Restart IPC
		3 IPCamera	On Line	rtsp://172	.16.16.188:55	4/stream0	RTSP	Enabled	Modify		
		4 IPX17 Lo	Off Line(Off Line)	1	172.16.16.61:		Onvif	Enabled	Modify		
		5 Channel 5 Off Line		0.0.0.1			Private	Forbidden	Modify		
		6 Channel 6	Off Line		0.0.0.0:1		Private	Forbidden	Modify		
		7 Channel 7	Off Line		0.0.0.0:1		Private	Forbidden	Modify		

Manually Add:

There are two ways you can typically manually add an IPC to a Tiandy NVR. These include adding via the Customized Add option or by modifying a pre-added camera. Note pre-added cameras are only relevant when working with a Tiandy NVR with built in PoE channels.

- 1. To customize add simply select the option labeled **"Customized** Add".
- 2. To modify a pre-added camera simply select the option "Modify" next to the channel you would like to adjust.

Tiandy	Live Vi	ew		Playb	ack l	_og	Configurati	on	EW					
Basic Set		View Playback Log Digital Channel POE Power Information IP Address F I 172.16.16.28 I 172.16.16.40		n										
Digital Channel	-				T OE T OWER INIOIMAU	511								
Digital Channel				IP /	Address	Protocol Type	Chn No.	Add status	Activation st	MA	с	Edit	Add	
Audio Video Set				172.	16.16.28	Onvif	1		Activated			Edit	Add	^
Network				172.	16.16.40	Onvif	1		Activated			Edit	Add	
Event Schedule				172.	16.16.58	Onvif	1	Added	Activated			Edit	Add	
VCA				172.	16.16.61	Onvif	1	Added	Activated			Edit	Add	
Advanced Intelligence	е		_	172.	16.16.95	Onvif	1		Activated			Edit	Add	
Storage				1 172.	16.16.96	Onvif	1	Added	Activated			Edit	Add	
Dome Set				1	6.16.108	Private	1		Acti	3C:DA:6D:	92:5B:68	Edit	Add	
System				172	16 1. 115	∩nvif	1		Acti 2			Edit	Δdd	~
		5	Search	A][dd Customize.	Quick Add	d Advance	Set	Display a	ind Screen	IPv4	~ AI	1	~
	Ì		Cha	Camera	Connection Status		Attribute		Protocol Type	e State	Modify	cloud Up	. Restart IPC	
			1	Channel 1	Off Line(Usernam		172.16.16.96:	1	Onvif	Enabled	Modify			^
			2	IPX6-V2	On Line		172.16.16.58:	1	Onvif	Enabled	Modify		Restart IPC	
			3	IPCamera	On Line	rtsp://172	.16.16.188:55	4/stream0	RTSP	Enabled	Modify			
			4	IPX17 Lo	On Line		172.16.16.61:	1	Onvif	Enabled	Modify		Restart IPC	
			5	Channel 5	Off Line		0.0.0.0:1		Private	Forbidder	Modify			
			6	Channel 6	Off Line		0.0.0.0:1		Private	Forbidder	Modify			
			7	Channel 7	Off Line		0.0.0.0:1		Private	Forbidder	Modify			
			8	Channel 8	Off Line		0.0.0.0.1		Private	Forbidder	Modify			\checkmark

3. Fill in the cameras corresponding information and then select **"Confirm"**. Review details below for reference.

Device Type – Set to Onvif
Connect Mode – No changes needed
IP Address – Input your IP Cameras IP Address
Proxy IP – No changes needed
Username – Input your IP Cameras user name
Password – Input your IP Cameras password
Device Channel – No changes needed
Device Port – Input your IP Cameras port (typically 80 by default on most cams)
Stream – No change needed

Manual		
Channel No.	[3] Channel 3	
Add Method	Manual Add	
Device Type	Private 🗸	
Connect Mode	IPv4	
IP Address	0.0.0.0	
ProxyIP		
User Name	admin	
Password	••••	
Device Channel	Channel No.1	
Device Port	3000	
Stream	1st Stream	
Password Decryptor		
	Sync password to get reserved information	on.
	Confirm	

Password Decryptor – No change needed

Manually Add with RTSP:

Refer to page 11 instructions to get to this point.

1. Change the "Device Type" from Private to "RTSP" and fill in the below information.

Device Type – Set to RTSP
Username – Input your IP Cameras user name
Password – Input your IP Cameras password
Network Type – No change needed
Main Stream URL – Fill in corresponding RTSP string for the camera you are attempting to add
Sub Stream URL - Fill in corresponding RTSP string for the camera you are attempting to add

Customized Adding				
Channel No.	[3] Channel 3 🗸 🗸			
Add Method	Manual Add 🗸 🗸			
Device Type	RTSP v			
Connect Mode	IPv4 v			
IP Address	0.0.0.0	🗌 Batch		
ProxyIP				
User Name	admin	_		
Password	•••••	Examp	Flux & UN	vv RTSP information: rtsp:// <ip_address>:554/stream<0</ip_address>
Device Channel	Channel No.1 🗸 ~ Channel No.1(🗸		-	or 1>
Stream	1st Stream 🗸		UniView	rtsp:// <ip_address>:554/media/video <1 or 2></ip_address>
Password Decryptor		<ip_ad< td=""><td>dress>=the</td><td>ip address of the camera you are trying to</td></ip_ad<>	dress>=the	ip address of the camera you are trying to
Network type	TCP v	add <# or #	+>=the stream	m number, With Flux the main stream is at 0
Main stream URL	rtsp://	and th	e sub at 1 ar	nd with UNV the Main is at 1 and the sub is
Sub-stream URL	rtsp://	at 2		
	Sync password to get reserved info	rmation.		

Confirm

Upon successful addition of the camera the Channel list will show it as "On Line". If Offline review the previous steps and confirm all information is input correctly.

Tiandy	Live \	View Playback L			og Configuration EW										
Basic Set		Di	gital C	hannel	POE Power Ir	nformatio	n								
Digital Channel															
Digital Channel			IP Address Pro				Protocol Type	Chn No.	Add statu	s Activation st	MAC	;	Edit	Add	
Audio Video Set				172	172.10.10.01			I	Audeu	Activateu			Euli	Auu	1
Network				172	.16.16.95		Onvif	1		Activated			Edit	Add	
Event Schedule				172	.16.16.96		Onvif	1	Added	Activated			Edit	Add	
VCA			172.16.16.108				Private	1		Activated	3C:DA:6D:9	2:5B:68	Edit	Add	
Advanced Intelligen	ce		172.16.16.115				Onvif	1		Activated			Edit	Add	
Storage			172.16.16.157				Onvif	1		Activated			Edit	Add	
Dome Set			172.16.16.188				Onvif	1		Activated			Edit	Add	
System				172.	16.16.235		Onvif	1		Activated			Edit	Add	
-)			Search		Add Cus	stomize	Quick Add	Advance	e Set	Display a	and Screen	IPv4	~ A	11	,
			Cha	Camera	Connection	Status		Attribute		Protocol Typ	e State	Modify	Cloud Up	. Restart IP	С
			1	Channel 1	Off Line(User	nam	1	72.16.16.96:	1	Onvif	Enabled	Modify			٦
			2	IPX6-V2	On Line	e	172.16.16.58:1		Onvif	Enabled	Modify		Restart IP	с	
			3	IPCamera	On Line	е	rtsp://172.	16.16.188:55	54/stream0	RTSP	Enabled	Modify			
			4	IPX17 Lo	On Line	е	1	72.16.16.61:	1	Onvif	Enabled	Modify		Restart IP	с
			5	Channel (On Line	е	rtsp://172.	.16.16.28/me	dia/video1	RTSP	Enabled	Modify			
			6	Channel 6	Off Line	е		0.0.0.0:1		Private	Forbidden	Modify			
			7	Channel 7	Off Line	е		0.0.0.0:1		Private	Forbidden	Modify			
			8	Channel	Off L in	e		0.0.0.0.1		Private	Forbidden	Modify			
		F	Remove	•											