

Tiandy

QUICK HOW-TO-GUIDE

Easy7 Smart Client PC Software Adding a Device

In this guide we will be providing you a quick walkthrough on how to add your Tiandy NVR to the Easy7 Smart Client PC Software using an IP address or the P2P QR Code.

Desktop & Laptop (Windows and Mac)

Download & Install Instructions

From a web browser go to: www.g4direct.com -> Navigate to the "Help and Support" page -> Select "Tiandy Product Resource" -> Select the option labeled "Easy7 Smart Client PC Software".

Download and install the latest version of "Easy7 Smart Client", for your system. If it is Mac download latest version for Mac: currently ver. 8.3

Extract/unzip, install-program from download and run it. The program will install (default settings are recommended during install prompts). From Launchpad (Mac) or Start (Windows) launch Easy7 Smart Client (allow access if prompted by security)

Once application opens, if greeted with the incorrect language simply change the option via the lower left-hand drop-down box.

This will prompt you to setup your initial password setting for your "admin" user. Create the password and fill in the password recovery questions, in order to secure and access the Homepage. Note: Passwords cannot contain special character i.e. !@#\$%^&*

Once the "admin" user is secure you will be required to login again. Once logged in the software will prompt to the Home Page.



1 1 455110			
	Please set the secrecy questions.		
	Please select question 1.	▼	
	Please enter the answer of question 1.		
	Please select question 2.	▼	
	Please enter the answer of question 2.		
	Please select question 3.	▼	
	Please enter the answer of question 3.		
	Confirm		

Adding your NVR

Tiandy	Home page			© ◎ ⊕ - ♂ ≥ 10.423	× 21
Common	functions				
	Live View Vew the live images at the monitoring point	Playback Search and play the recording file at the monitoring point	Device management Add, modify and cette groups	System configuration Typical operation on client configuration	
	Alarm management Real-time indication of unit alarm massage to facilitate access to unit exception	TV Wall TV wail configuration, preview, offline switch settings	Intel and outliet management Face management, human gate real- time preview and information query	ElectronicMap Management and operation function of electronic map	
Basic fur	nctions				
	User Operation logs	Data statistics Alarm configuration	Intelligent search Face recognition		
A		©Tiandy Co.,Ltd A	III Rights Reserved	adm	nin

To add a device, select "Device Management"

Adding Local NVR

(Follow these instructions if your PC Laptop is connected to the same network as the NVR itself)

Select the <u>"Encode Device"</u> tab and then select the option labeled <u>"Auto</u> <u>Search"</u>.



This will run a scan of your network showing and allowing the ability to add any local Tiandy devices connected to such.

Add	Device				×
	+ Add	C Refresh			
	Device Type	IP address	Port	Channel No.	Product number
	TD-S	172.16.16.108	3000	1	Unknown
	TD-S	172.16.16.109	3000	1	Unknown
	TD-S	172.16.16.110	3000	1	Unknown
	TD-S	172.16.16.111	3000	1	Unknown
	TD-DVR	172.16.16.238	3000	20	Unknown
	TD-DVR	172.16.16.243	3000	10	Unknown

Find the desired device and check the associated box then click "Add".

Add	Device				×
	+ Add	C Refresh			
	Device Type	IP address	Port	Channel No.	Product number
	TD-S	172.16.16.108	3000	1	Unknown
	TD-S	172.16.16.109	3000	1	Unknown
	TD-S	172.16.16.110	3000	1	Unknown
	TD-S	172.16.16.111	3000	1	Unknown
	TD-DVR	172.16.16.238	3000	20	Unknown
~	TD-DVR	172.16.16.243	3000	10	Unknown

This will prompt a window requesting the username and password of your NVR. Fill in the **user** and **password** and select **"OK"**.

Add Device	×			
Add Mode	IP Туре 🔻			
User Name	admin			
Password				
Market Import to Group				
OK Cancel				

Easy7 will notify you if the device added successfully or not.

If the device did not add successfully, double-check the login credentials for the device being added otherwise, the device may need to be added manually.



Manually Adding NVR

(Follow these instructions if your PC Laptop is not connected within the same network as the NVR itself or if you wish to manually add your device.

From the Device Management page select the <u>"Add"</u> button.

Tiandy	Home page	Device management	t	
Device Group				
Encode device (0)	Q Auto Search	+ Add / Modify	而 Delete 同 Invert Selection	C Refresh
📾 Decoding device (0)				
🛲 Gate equipment (0)		Name	Device Type	IP address

Fill in the corresponding information for your device. On the "Add Device" window Change the <u>"Add Mode"</u> to the desired method (IP/Domain/DDNS/P2P/AliP2P)

Add Device		×	
Add Mode	IP 🔻	,	Add Mode – Here you will select your Desired Add Mode including IP/Domain/DDNS/P2P/AliP2P
	✓ Off-line Add	_	Device Name – Here you can assign the device you
Device Name	NVR_243		adding a name. (Note this can be set to anything you'd like)
Device IP	172.16.16.243		Device IP/Device ID – Here is where you will fill in your devices IP address/Domain/DDNS/P2P #.
Port	3000		Port – Here you will fill in your devices port (default
User Name	admin		3000)
Password		٦ I	User – Here fill in your NVR's username
T dosword			Password – Here fill in your NVR's password for the
Video Chan	a		corresponding user trying to login to.
	Import to Group		Video Channels – Here fill in how many channels your NVR support.
	Add Cancel		

Once all fields are filled in select add. If successfully added and connected you may view your NVR's IP Cameras via the Live View Tab.

